


Durst VT4

V i e r t a k t e r

They call it the Master of Takt.

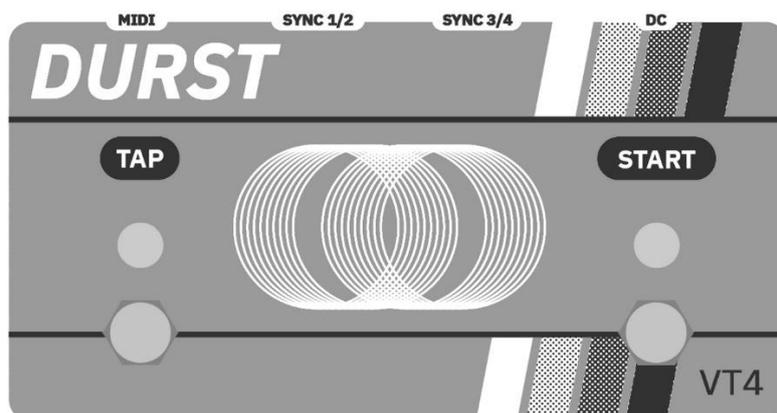

Bedienelemente

TAP Mit diesem Taster kann die Geschwindigkeit eingetappt werden. Hierzu einfach die Viertel der gewünschten Geschwindigkeit eingetappt. Die LED leuchtet in der aktuellen Geschwindigkeit.

START Mit diesem Taster lassen sich externe MIDI-Geräte über den MIDI-Port starten. Das können Beatmaschinen oder Sequenzer sein. Die LED zeigt an, ob der Beat oder die Sequenz gerade läuft oder nicht.

Ausgänge

MIDI Über den MIDI-Output lassen sich externe Geräte synchronisieren. Diese laufen dann mit der gleichen Geschwindigkeit, die eingetappt wurde. Auch der Start/Stop-Befehl wird darüber übertragen, so dass externe Geräte gestartet und gestoppt werden können.

Jacks Über die beiden TRS-Jacks können externe Effektpedale mit TAP-Input synchronisiert werden. Jede der beiden Buchsen verfügt über zwei Kanäle (Tip und Ring), somit lassen sich insgesamt vier Effektpedale synchronisieren. Um beide Kanäle nutzen zu können wird ein Y-Kabel benötigt. Den TRS-Stecker steckt man dazu in das VT4 und die beiden TS-Stecker dann in das jeweilige Effektpedal. Manchmal muss das Effektpedal noch auf TAP-Betrieb eingestellt werden. Siehe dazu in den jeweiligen Bedienungsanleitungen nach.

English

Controls

TAP This button can be used to tap in the speed. Simply tap in the quarter of the desired speed. The LED lights up in the current speed.

START This button can be used to start external MIDI devices via the MIDI port. These can be beat machines or sequencers. The LED shows if the beat or sequence is currently running or not.

Outputs

MIDI External devices can be synchronized via the MIDI output. These will then run at the same speed that was tapped in. The start/stop command is also transmitted via MIDI, so that external devices can be started and stopped.

Jacks External effect pedals with TAP input can be synchronized via the two TRS jacks. Each of the two jacks has two channels (tip and ring), so a total of four effect pedals can be synchronized. To use both channels a Y-cable is needed. The TRS plug is plugged into the VT4 and the two TS plugs are plugged into the respective effect pedal. Sometimes the effect pedal has to be set to TAP mode. Please refer to the respective manuals.